



### Air Supply Ball Valves

Air supply ball valves are fitted between the air hose and the moisture separator to isolate the compressor when undertaking maintenance work. The valves disconnect the compressed air from the blast machine for safe work.

#### Part Numbers

Part Number	Description
<b>MT30189</b>	3" (76mm) Male-Female Ball Valve BSP
<b>MT30191</b>	2" (51mm) Male-Female Ball Valve BSP
<b>MT29177</b>	1½" (38mm) Male-Female Ball Valve BSP
<b>MT30193</b>	1¼" (32mm) Male-Female Ball Valve BSP
<b>MT30195</b>	1" (25mm) Male-Female Ball Valve BSP
<b>MT28610</b>	¾" (19mm) Male-Female Ball Valve BSP
<b>MT28619</b>	¼" (6mm) Female-Female Ball Valve BSP
<b>MT30085</b>	¼" (6mm) Male Adaptor BSP